



Next, set your table saw at 10 degrees and rip one side of your Bottom Blank. Make sure you rip it slightly wider than what the finished width needs to be. Since the finished width needs to be 1'-3 1/4" at the widest point, the first rip should be around 1'-3 1/2". Next reset the width for 1'-3 1/4", turn your blank around and make a second pass, being careful to keep the same side down, so the lines described by the edges are converging, not parallel.

Bottom Blank

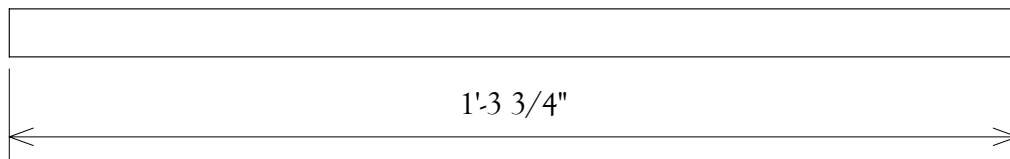

Bottom Blank after 1st Pass

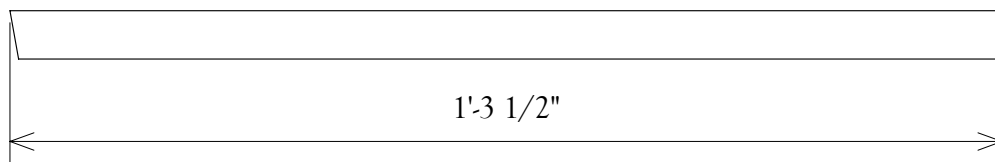

Bottom Blank after 2nd Pass

