


Take your 1x stock to the table saw and rip about 16' at 2". From this cut one piece at 21" one piece at 19 1/2" two at 18" two at 15" two at 9 1/2" two at 7 1/2" and one at 5". Round over one end of the 18" pieces, one end of the 15" pieces, one end of the 9 1/2" pieces, both ends of the 21" piece and both ends of the 19 1/2" piece. Don't round over either end of the 7 1/2" or 5" pieces. All of the pieces that got rounded over get 7/8" holes drilled out on the rounded ends. These holes are centered 1" in from the rounded end. The 15" pieces will get the non-rounded ends cut down to make the handles easier for small hands to grip. Measure down 4". Mark a 45 degree angle 1/2" in and 1/2" back toward the end. Mark a line from these points back to the end of the handles, this will leave a 1" wide handle, 3 1/2" long. One of the handles also gets a hole 5" from the first hole and the 9 1/2" pieces get holes 3 1/2" in from their first hole.

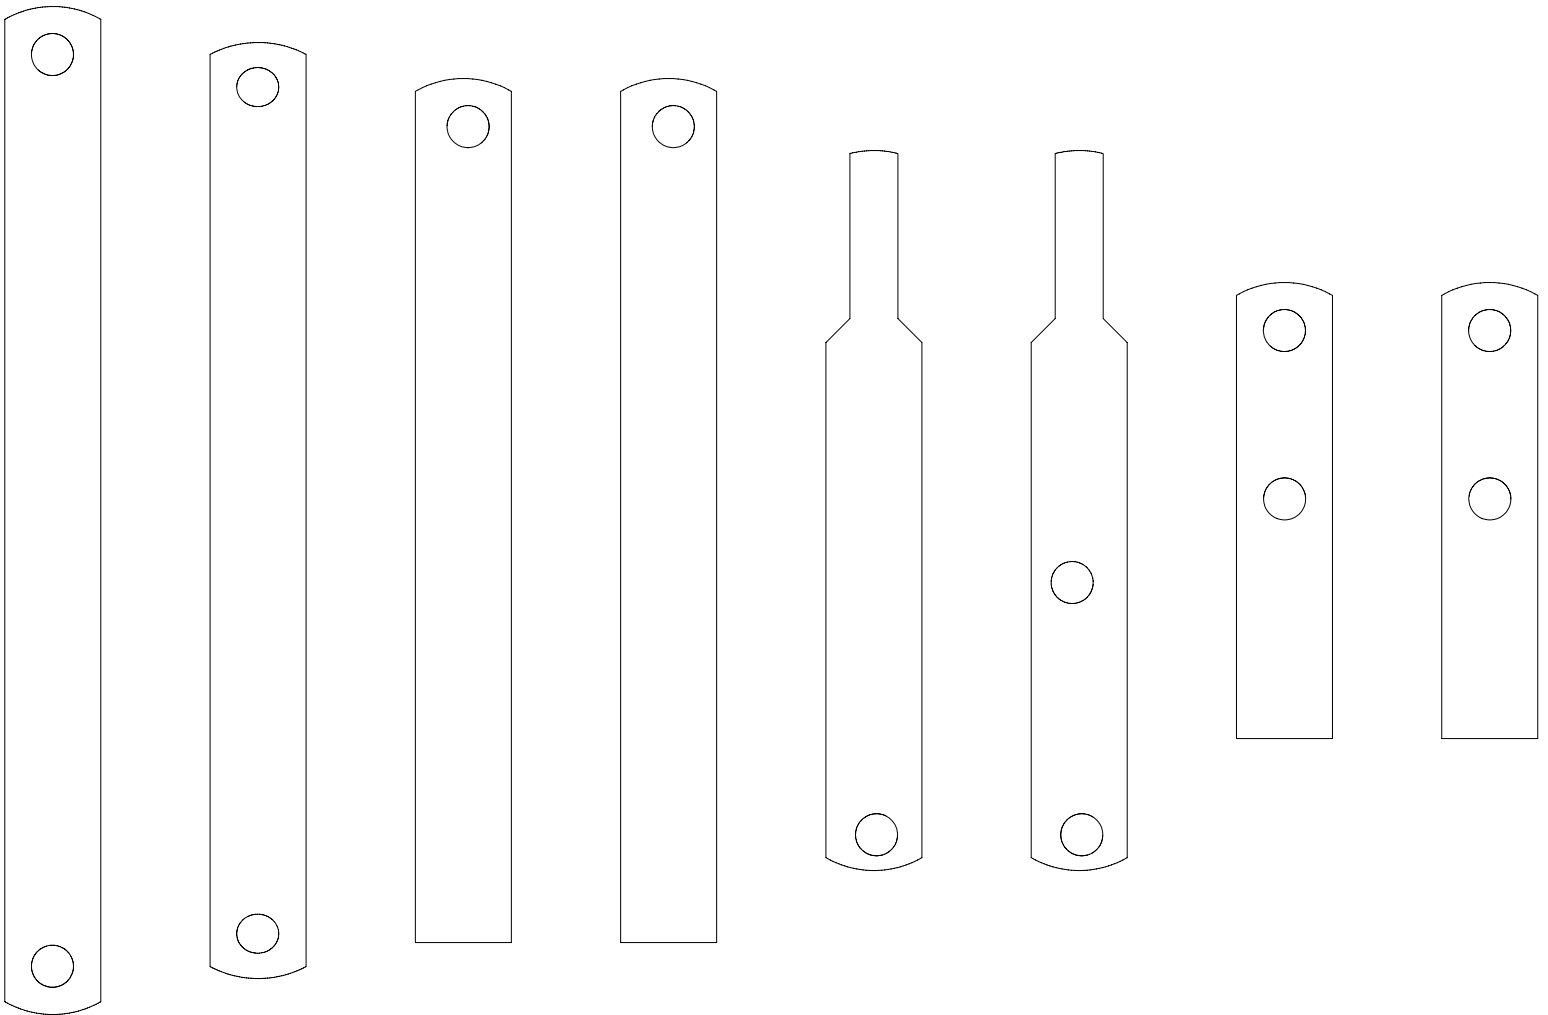

The 7 1/2" and 5" pieces are for the front of the seat, so we will set them aside for now.