



You can now glue the the Cab, the Barrel, and the box together. Flush the back of the Cab up with the back of the Box, center them and glue with wood glue and clamp in place until dry. While they are drying you can glue the Barrel onto the front of the Cab and centered on the Box, glue to both and clamp until dry.

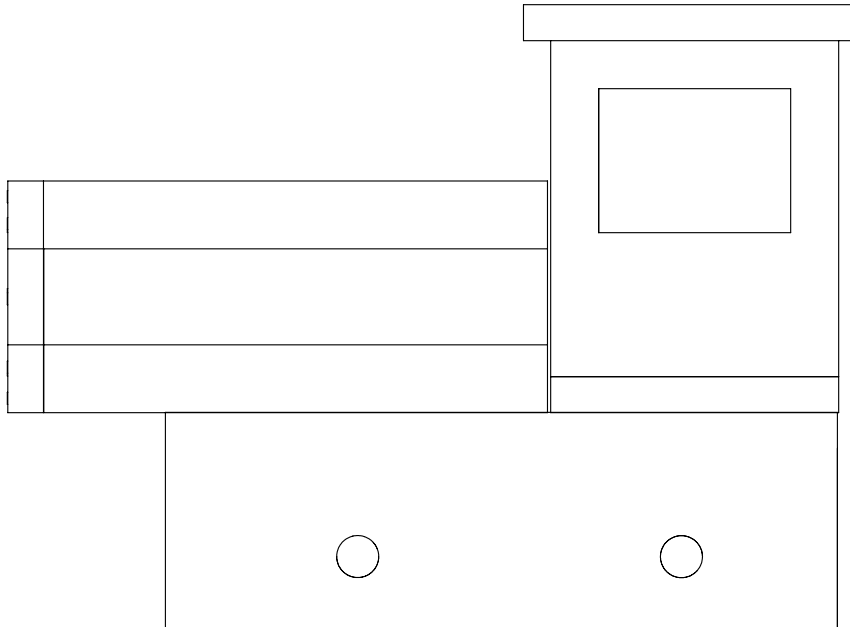

While you still have your 2" holesaw on your drill press, cut four pieces walnut 1x to make your stack. The 3" diameter piece for the top will be cut on the band saw, so as not to leave a pilot hole in the middle of it. glue these all together and put a 3" drywall screw with a washer on it through the holes from the bottom into the top piece to hold these together until they dry.

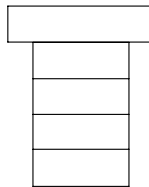

After the glue is dried you can glue the stack on top of the Barrel. Center it on the top stave and place it just behind the octagonal end cap.