


After the glue has cured and been scraped, you need to cut the tenons on your legs down to size. They should be 1" wide, that is along the thickness of the legs. They should be 1/2" thick and 1/2" tall. Because of the irregular shape of the legs you will need to cut these on the band saw. Mark them out on the bottoms and do your best to make them uniform.

After your tenons are cut, your legs can be added to your dragon. This illustration will give some idea of the placement and alignment.

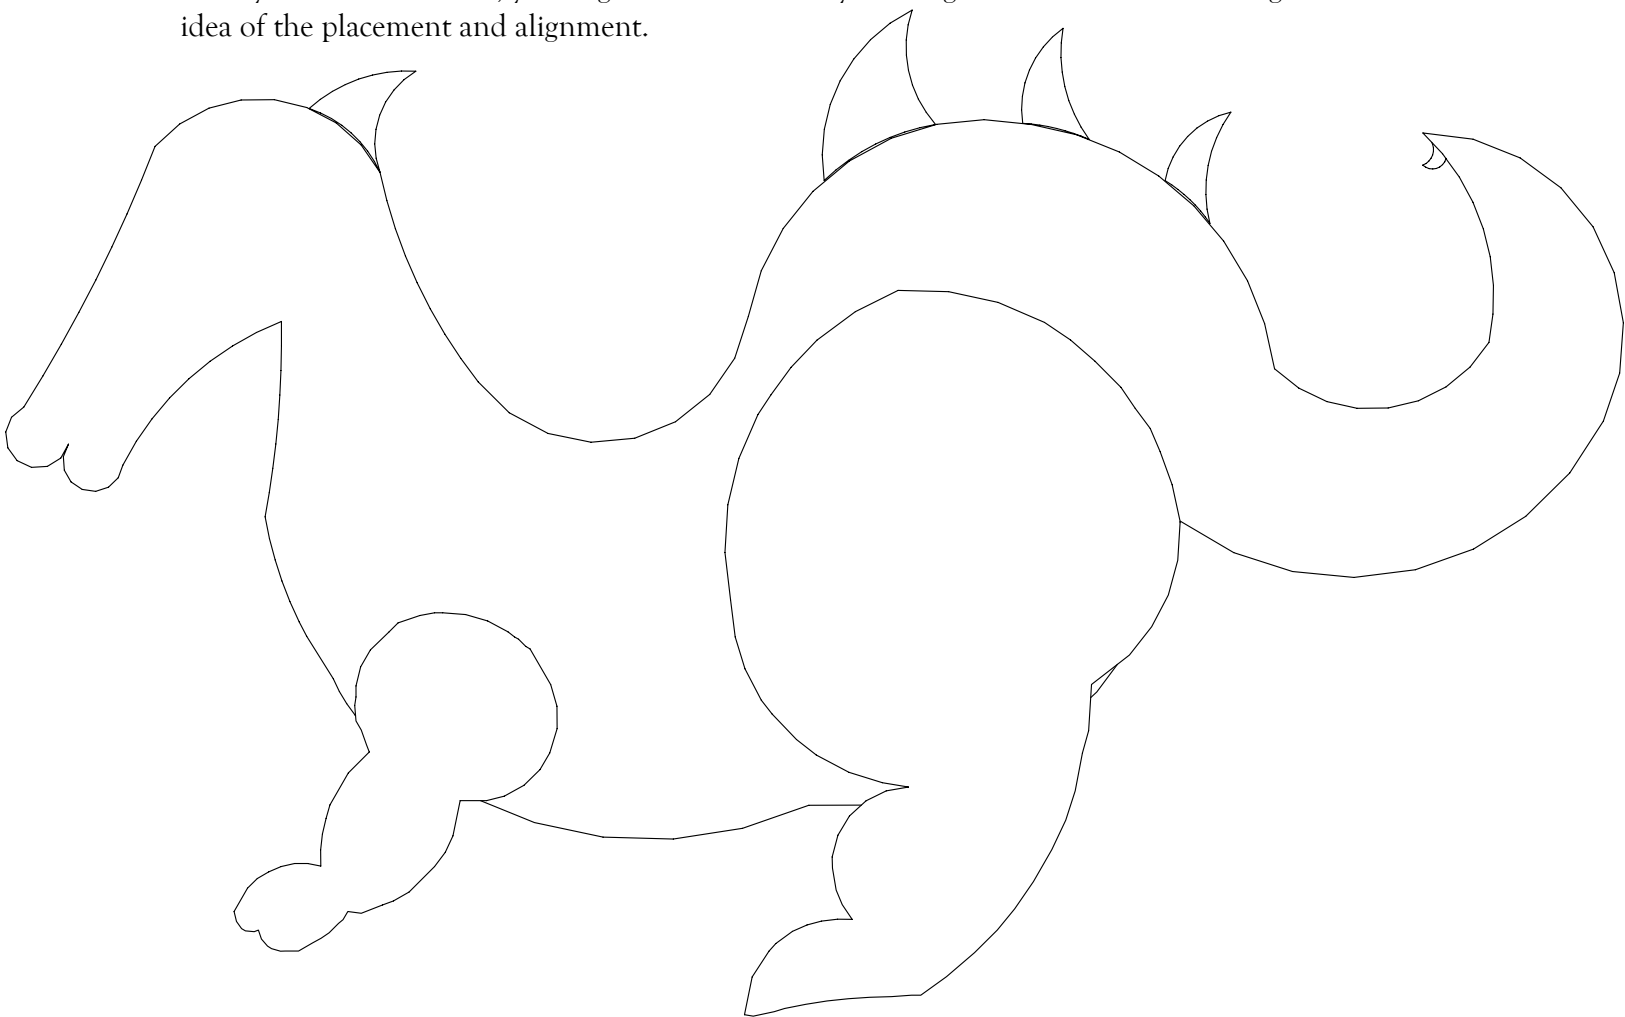

Once again adequate drying time will need to be given before removing the clamps.

In the mean time, you can start work on the rockers. These will be made out of 2 x 8 red oak. There are two of them and they are a 4' section of a 7' arc. Set up pivot point with a pencil or marker. Put a 4' long piece of 2 x 8 where the center point of the far side of the board is 7' from the pivot and the out side of the board is a tangent. Strike the arc then move the pencil 3" closer and strike the second arc. Round over the ends and these will be your rockers. Cut them out on the band saw very carefully, then take them to the oscillating spindle sander to clean them up.