


➤ Minimize cuts in housewrap and caulk or tape to seal all penetrations

➤ Tape housewrap according to manufacturers specifications at top plate, band joist, and horizontal seams, and secure with plastic-capped nails

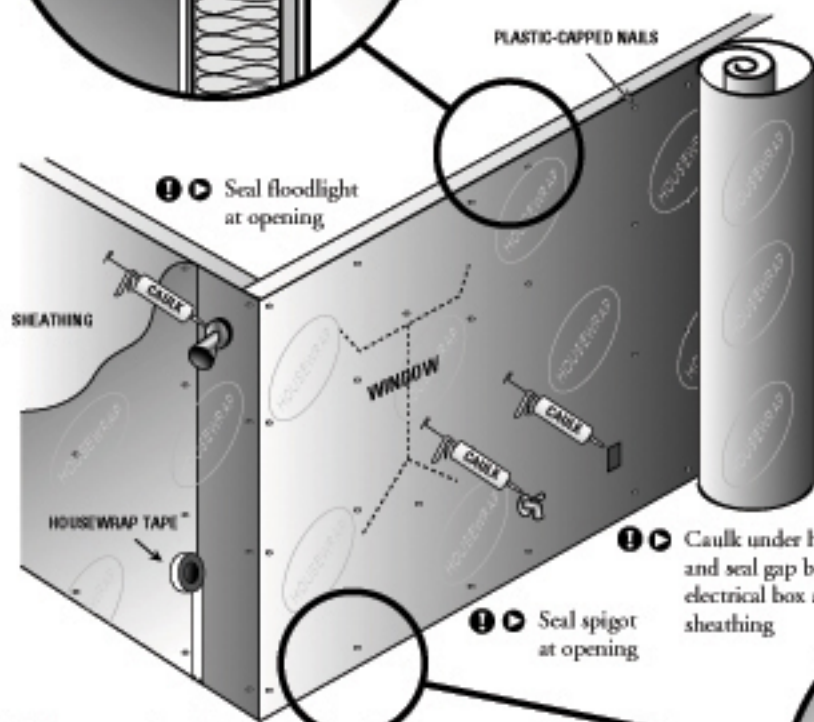

❗ ➤ Seal floodlight at opening

➤ Unroll around house

➤ Fasten flaps of window "T-cut" to the inside of the framing.
(* See *Window Flashing Building Tips*)


❗ ➤ Caulk under housewrap and seal gap between electrical box and sheathing

❗ ➤ Seal spigot at opening

➤ Housewrap should be overlapped shingle-style

➤ Seal overlap with tape

➤ Seal housewrap to foundation below bottom plate in basement or crawlspace.

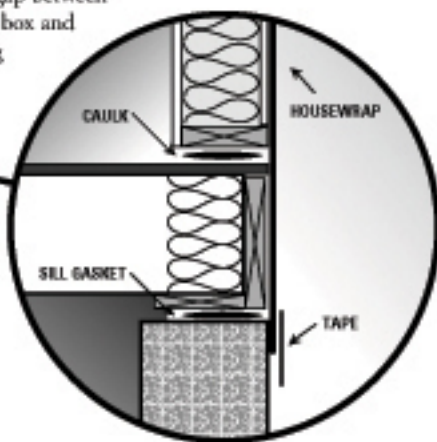

❗ = Another trade may have completed this step. Confirm with the site supervisor. If not, and you need to complete the step yourself, ensure that the necessary materials are available on site.